

- Before and after reprogramming your X-Arcade, test the buttons here.


<http://www.xgaming.com/service/ServiceFiles/Test/test.html>

- **Programming requires a PS/2 keyboard to be plugged into the back of the X-Arcade™ .**
- When the light is on you are in play mode, when the light is off you are in program mode.
- MODE 1 (switch closest to the serial cable) cannot be programmed. For custom settings use MODE 2, 3, or 4.
- To change modes, you must slide the switch on the back to desired Mode position, and then press the SAVE/LOAD button TWICE to load that mode (the LED on the X-Arcade™ should go out on the first push, and back on with the second).
- When the X-Arcade loses power, you will need to press SAVE/LOAD button TWICE to recall the programming.



## PROGRAMMING:

1. Start by choosing the mode you wish to program by moving the switch away from the serial cable to MODE 2, 3, or 4. Again, MODE 1 cannot be programmed.
2. Press the SAVE/LOAD button on the back of the X-Arcade™ (the light turns off).
3. Press AND HOLD any button or direction on the X-Arcade™ that you wish to change.
4. While still holding a button or direction from step 3, press and hold a key on your keyboard until the LED on the X-Arcade™ blinks. Once it blinks it has been programmed, and you can release both held buttons/keys.
5. Repeat steps 3 and 4 to program additional buttons/directions. (do not hit SAVE/LOAD again)
6. When you have programmed everything the way you want, press the SAVE/LOAD button on the back of the X-Arcade™ once more to save your settings onto the internal memory chip (the light turns back on).

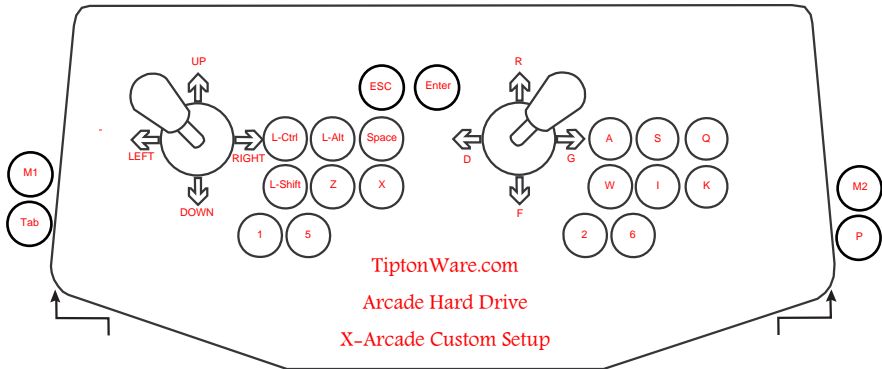

TiptonWare.com

Arcade Hard Drive

X-Arcade Custom Setup